

Type COM

COM10

M10

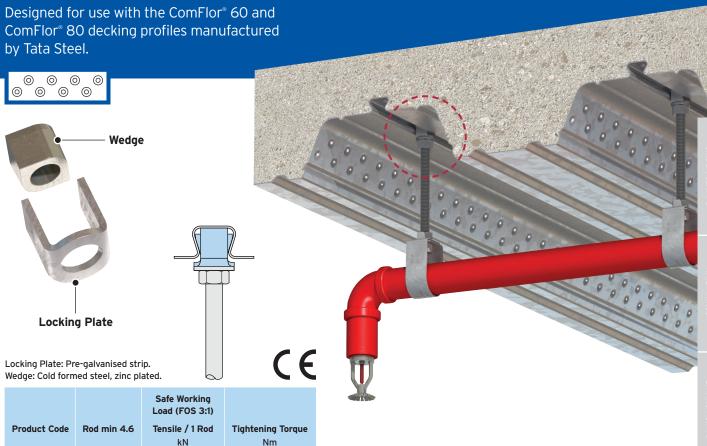

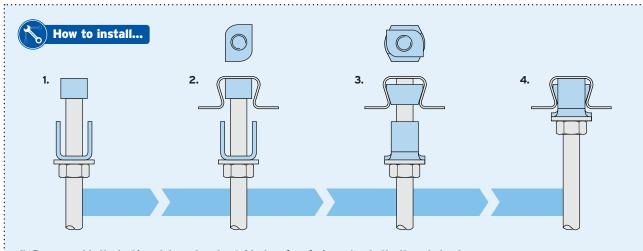

- 1) Pre-assemble the locking plate and wedge (widest surface facing up) onto the threaded rod.
- 2) Insert wedge into the re-entrant channel of the decking and rotate 90°.

1.25

- 3) Screw the rod so that it is in contact with the top of the re-entrant then slide the plate up the threaded rod and over the wedge to lock it in position.
- 4) Tighten the locknut beneath the plate and washer to hold the assembly in position.
- Install the decking fixings after the concrete has been poured and has reached full strength.
- If the decking profile is deformed or distorted, do not install the fixing. If in doubt, contact the Technical Support team for advice.



For Characteristic Resistances when designing a connection to Eurocode 3, please refer to DoP No.023 on the website www.Lindapter.com/About/CE










Compatible Profiles

Lindapter has developed an extensive range of CE Marked decking fixings to ensure optimum compatibility with all major decking profiles.

Components

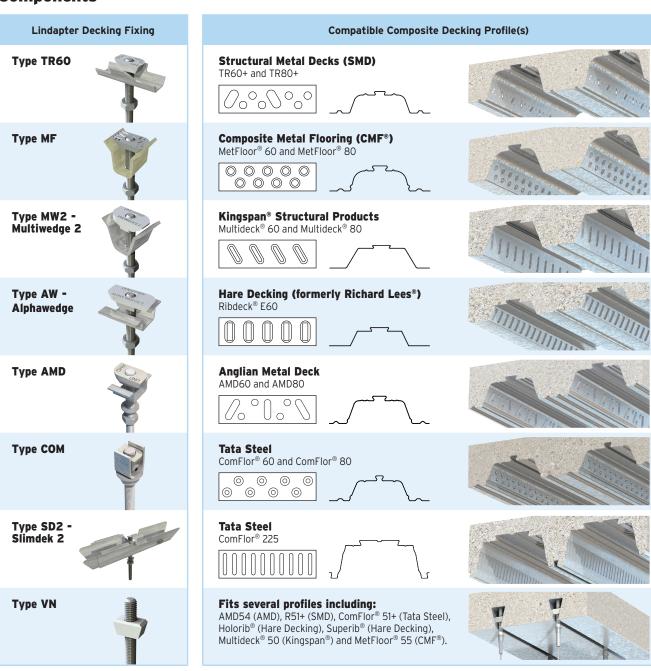

Also available





Designed for:

Service suspension from pre-cast hollow core slabs (minimum core depth of 75mm) as well as Structural Hollow Section (SHS), steel sheeting or purlins.









