

WEDGE ANCHORS



Torqx Wedge Anchors in a Zinc and Yellow Passivated Finish (ZYP), provide a threaded socket for a bolt or stud into concrete.

They are quick and easy to install using the Torqx Setting Tool.


TECHNICAL INFORMATION

Part Number	Short Code	Drill Hole Dia. [mm] d0	Depth of Drill Hole [mm] h1	Overall Emb. Depth [mm] hnom=hef	Anchor Length [mm] Lh	Thread Diameter [mm] d nom	Internal Thread Length [mm] Lth	Fixture Clearance Hole [mm] df	Min. Thickness [mm] hmin	Tightening Torque [mm] Tinst	Setting Tool Part Number
381919453	TQ0830	10	30	30	30	5	13	9	100	9	381920641
381919452	TQ1040	12	40	40	40	10	15	12	130	17	381920642
381919454	TQ1250	15	50	50	50	12	18	14	140	30	381920643

INSTALLATION INSTRUCTIONS




Drill a hole with the correct diameter to the specified depth.

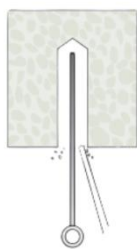


Clear the hole by blowing out any drilling debris and dust.



Insert the anchor into the concrete using an appropriate hammer.

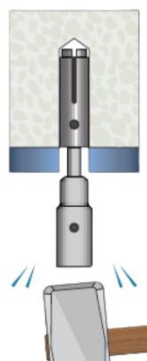

Hammer wedge, using the correct setting punch.

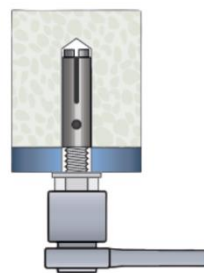

Tighten using a torque wrench to the specified torque setting.

RECOMMENDED TOOLS

SDS Drill Bits



Blow Out Pump



Setting Tool



VIEW ONLINE

